

**ZERO TURN BROADCAST SPREADER**



**COUNTRY ZERO TURN EQUIPMENT**

**P.O. BOX 104, 333 SALEM AVE., FREDERICKTOWN, OH 43019**


**PHONE: 740-694-9926 FAX: 740-694-5088**

**EMAIL: [admin@countryzeroturn.com](mailto:admin@countryzeroturn.com)**




Universal Mount Bar

If your zero turn mower is already equipped with our universal mount bar, you will only use the parts shown in the picture above. The foot lift pedal will not be used for the broadcast spreader.

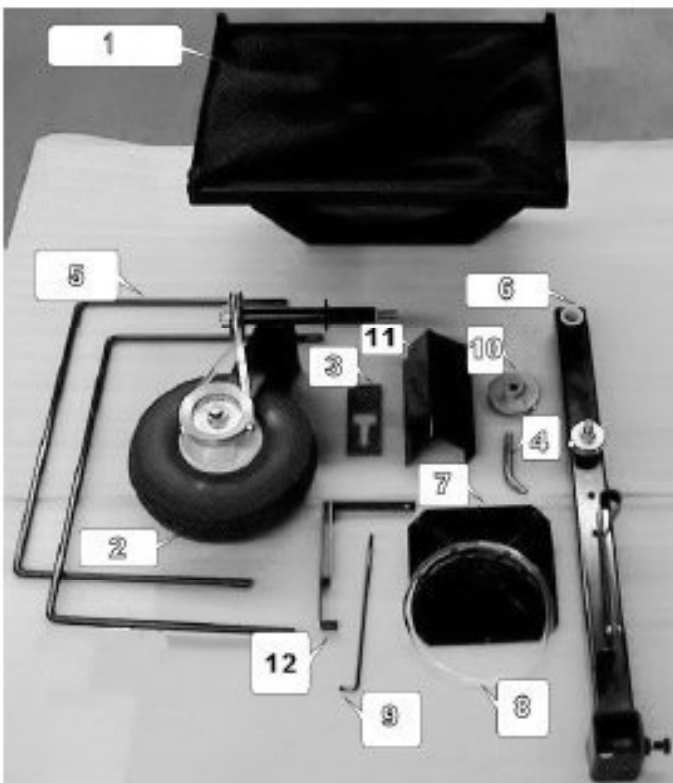


Parts Breakdown

PART	QTY	DESCRIPTION	PART	QTY	DESCRIPTION
1	1	FEED BIN	2	1	WHEEL ASSEMBLY
3	1	FEED RATE DOOR	4	1	AGITATOR
5	2	FEED BIN SUPPORTS	6	1	SUPPORT FRAME
7	1	FAN	8	1	O-BELT
9	1	OPERATING ROD	10	1	PULLEY
11	1	O-BELT GUARD	12	1	FEED RATE SLIDE
-	2	5/16" x 3" BOLTS	-	3	1/4" x 3/4" BOLTS
-	1	5/16" x 2" BOLT	-	3	1/4" NUTS
-	4	5/16" FLAT WASHERS	-	2	1/4" X 3/4" TEK SCREWS
-	4	5/16" LOCK WASHERS	-	4	1/8" COTTER PINS
-	2	5/16" NUTS	-		
-	1	5/16" WINGNUT			

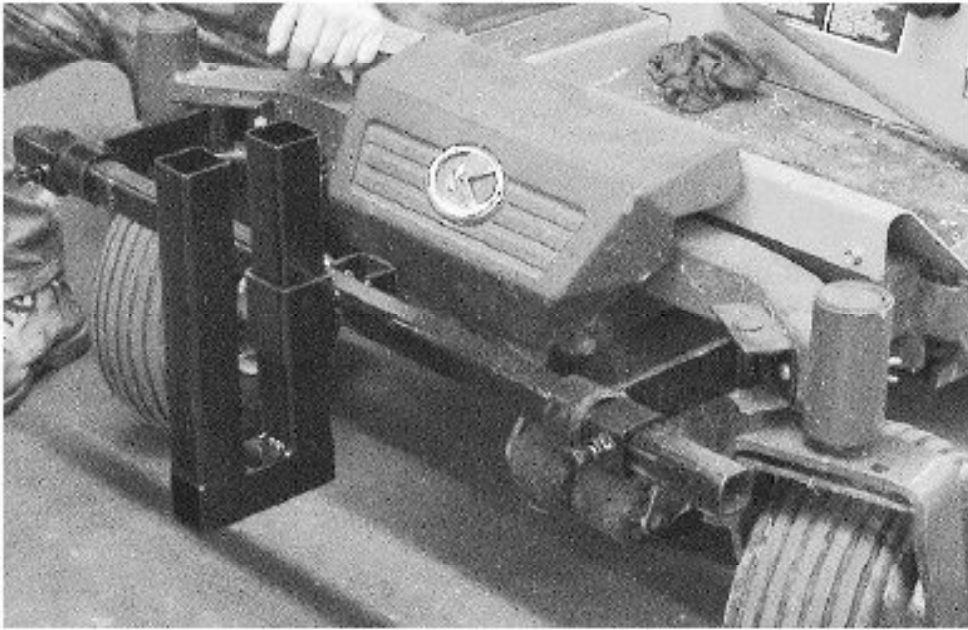

Slide the "U" shaped tube upward into the mount bar and lightly tighten to hold on place.


You will adjust this tube once the spreader is assembled.

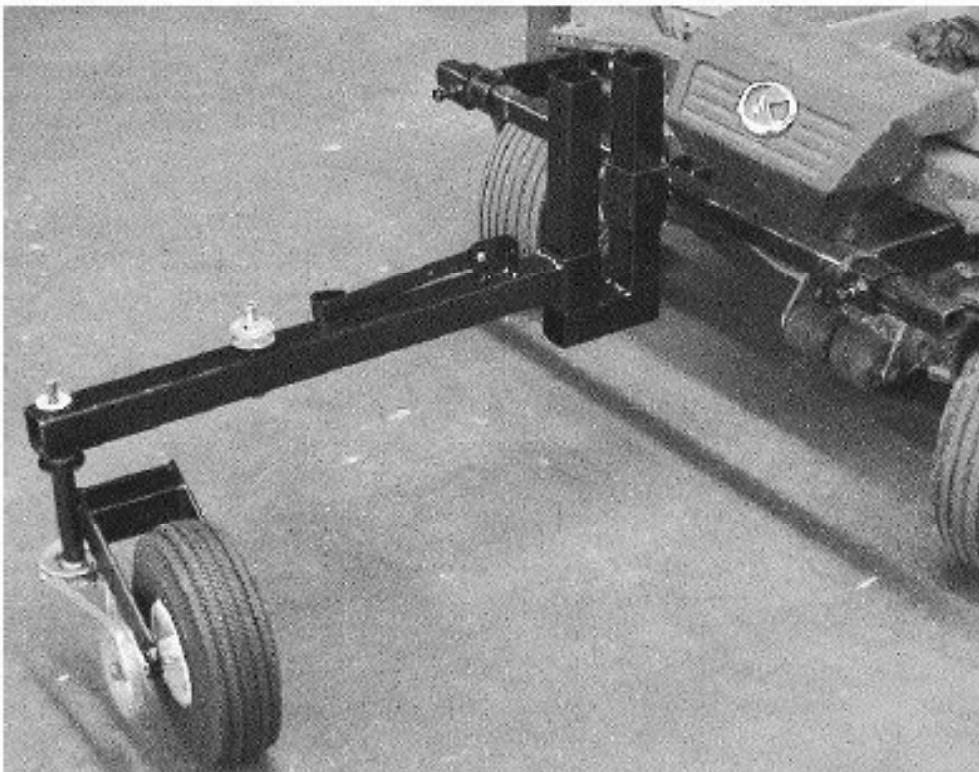


Slide the wheel assembly into the support frame, and then slide the support frame onto the "U" shaped tube.

Lightly tighten to hold on place.



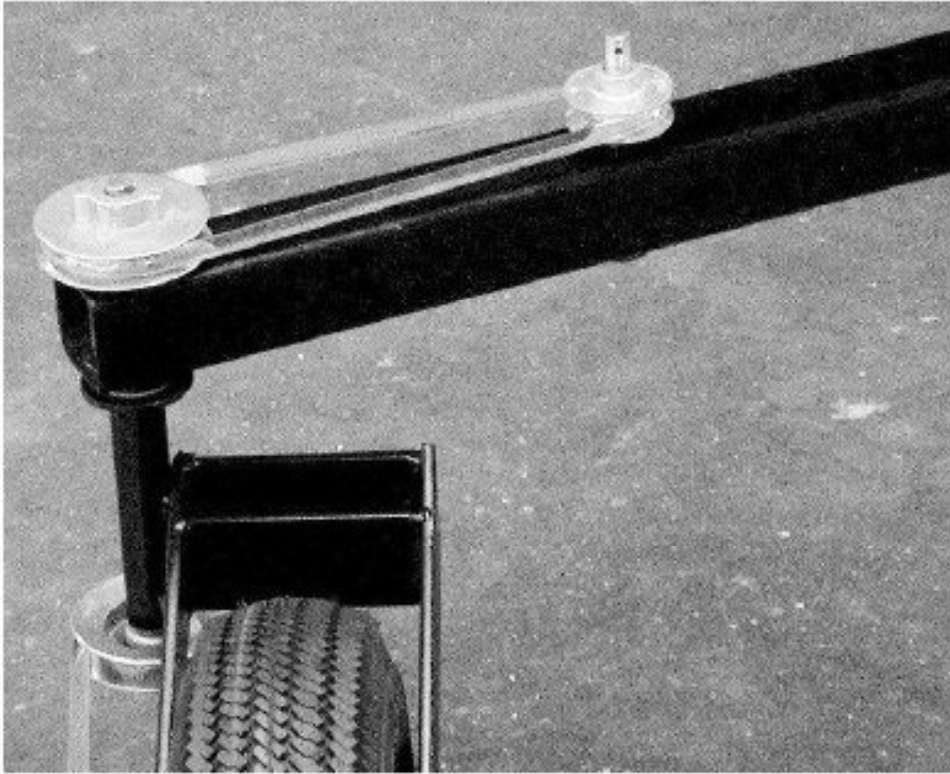


Slide the pulley onto the wheel assembly shaft and tighten the set screw. Make sure the set screw is position over the flat spot on the shaft. Slip the O-belt over the pulleys.

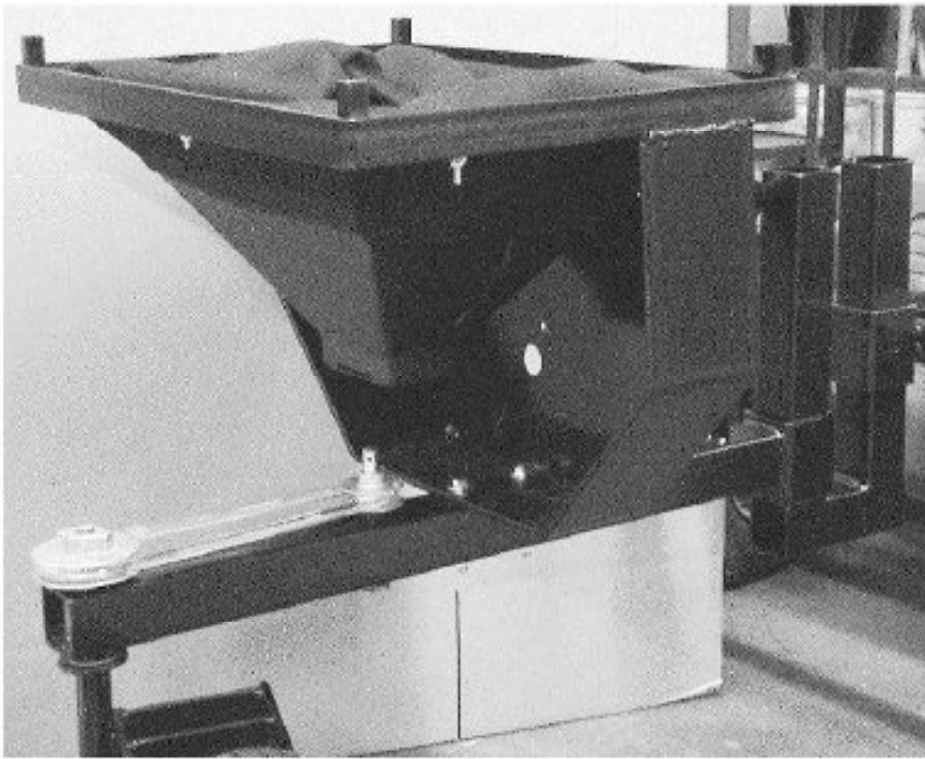


Attach the feed bin to the main frame using 2 – 5/16" X 3" bolts /washers/ lock washers /nuts.

Hand-tighten these bolts.

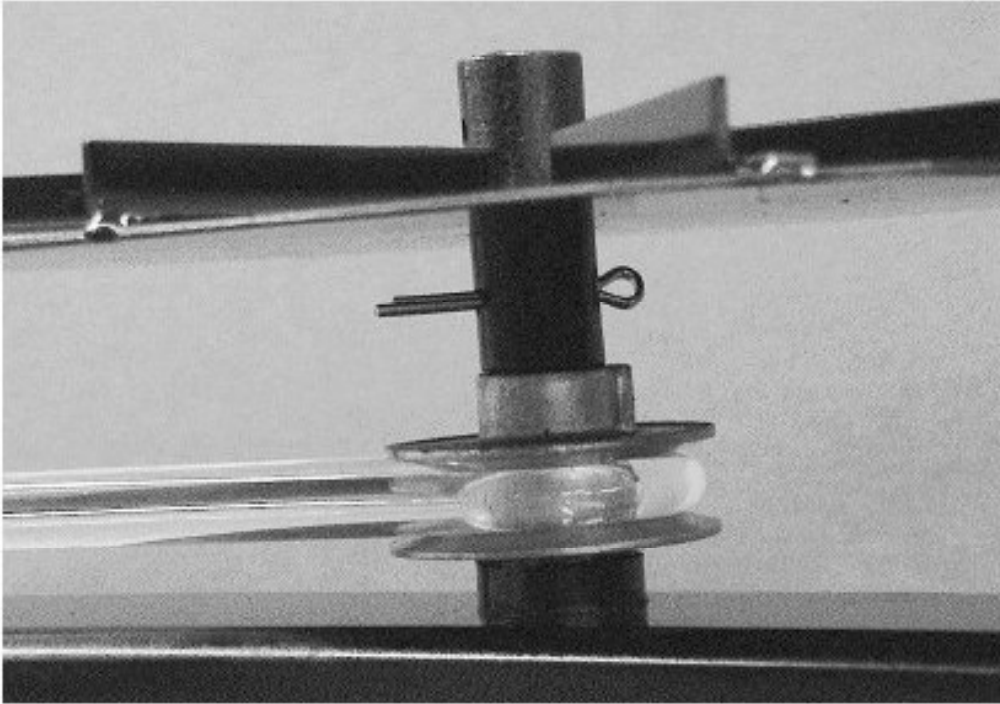


Attach the fan to the top of the shaft located in the middle of the support frame. Use a 1/8" cotter pin.

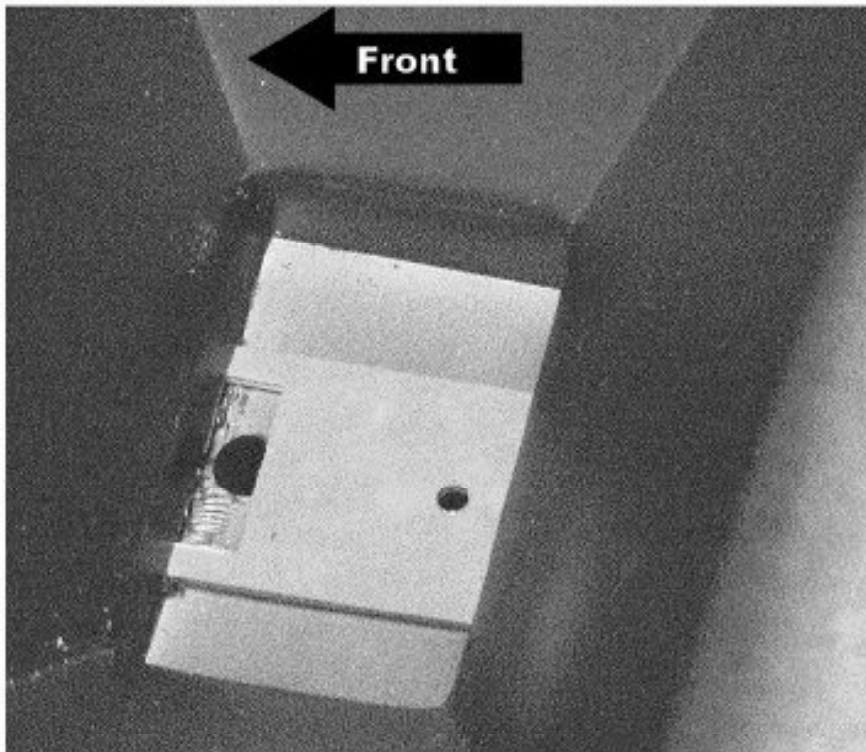


Slide the feed rate door into the bottom of the feeder bin. Make sure the small hole is towards the rear of the feed bin.



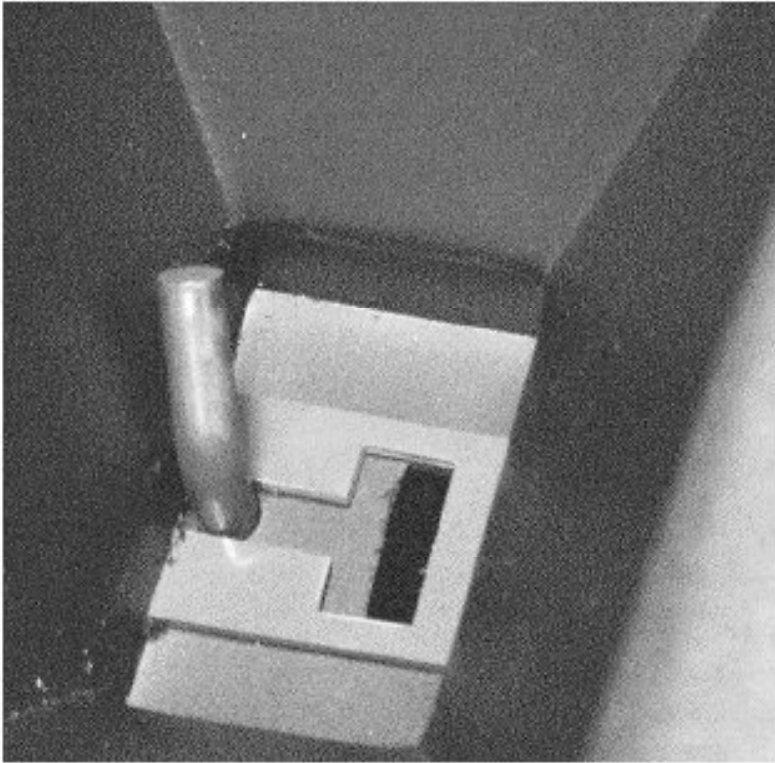


Insert the agitator into the hole as shown. Secure the agitator into the top of the fan using a 1/8" cotter pin.


Tighten down the bolts holding the feed bin to the support frame. Make sure that the agitator is not bound up.

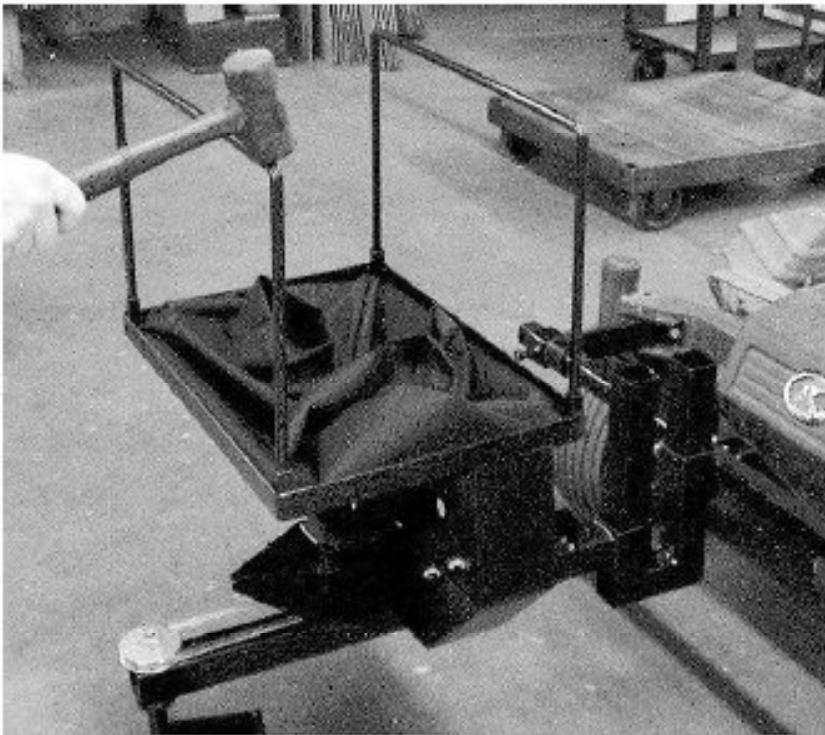

Insert the feed bin supports as shown above. Make sure the supports are in as far as possible.

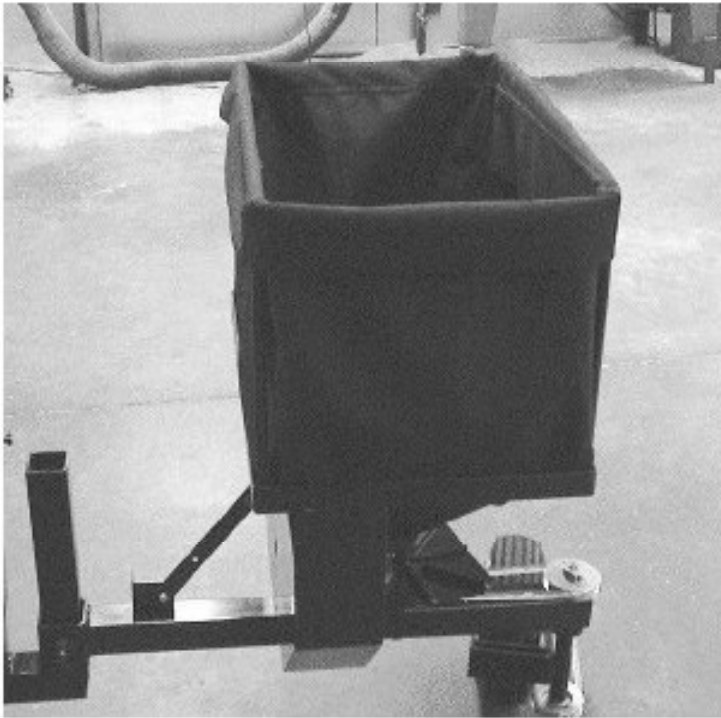


Pull the feed bag up and over the supports. Secure the bag around the supports using the sewn in Velcro strips.

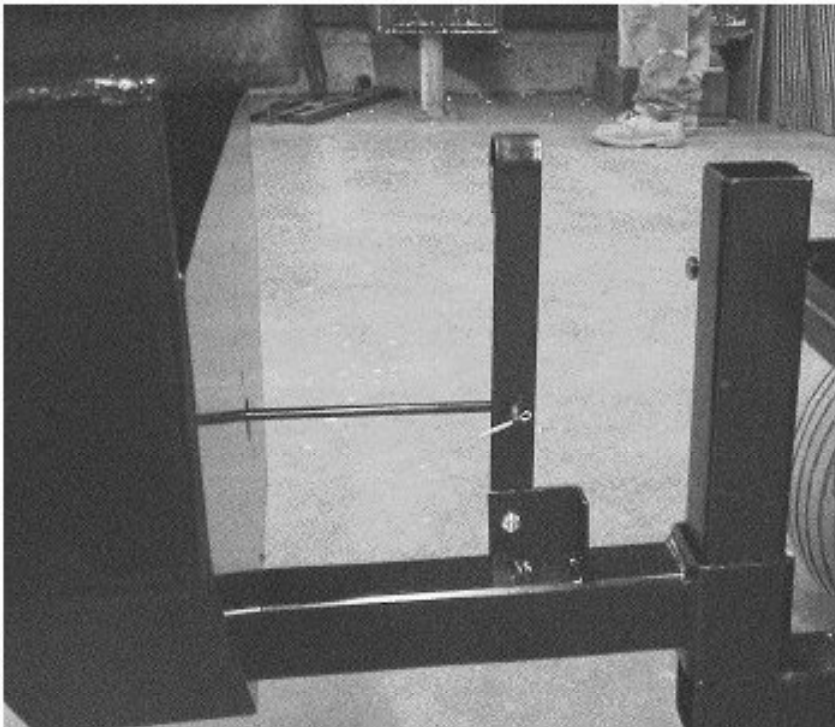


Attach the operating rod through the hole in the main frame. Secure the rod to the adjustment handle using a  $3/32$ " cotter pin, as shown above.



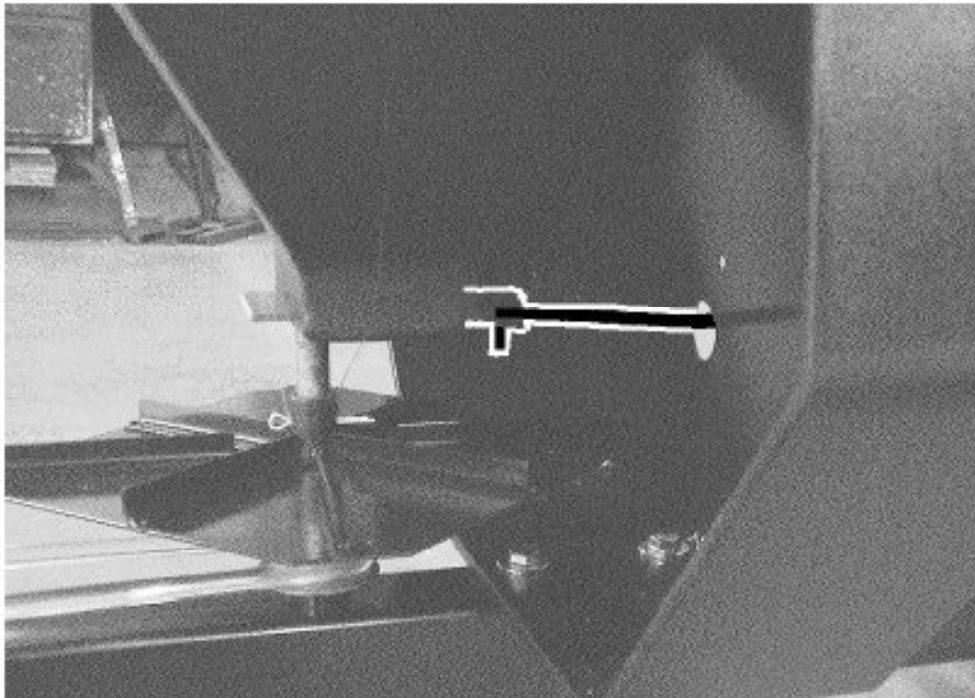

(Rod highlighted for clarity)

Attach the operating rod through the small hole at the rear of the feed rate door. Secure using a 3/32" cotter pin.

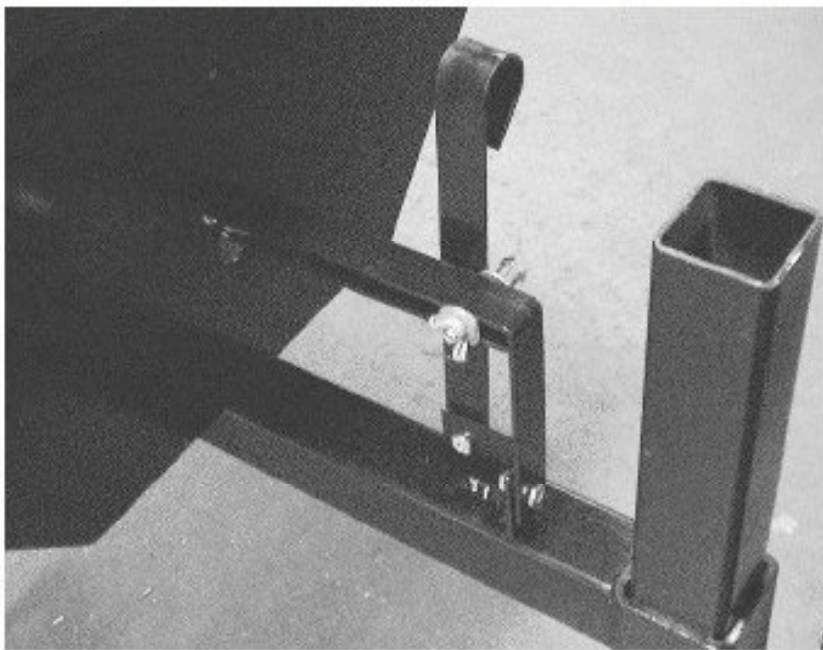


Attach the feed rate slide to the rear of the feed bin, and the support frame using 2 – 1/4" x 3/4" bolts and nuts.

Apply the calibration sticker to the top of the feed rate slide.


Attach the 5/16" x 2" bolt with tab using the 5/16" wing nut. (Normal bolt shown for clarity) The tab will extend over the sticker.

**You will need to determine your own spread rate. The adjustment will vary depending on what you are using in the spreader.**



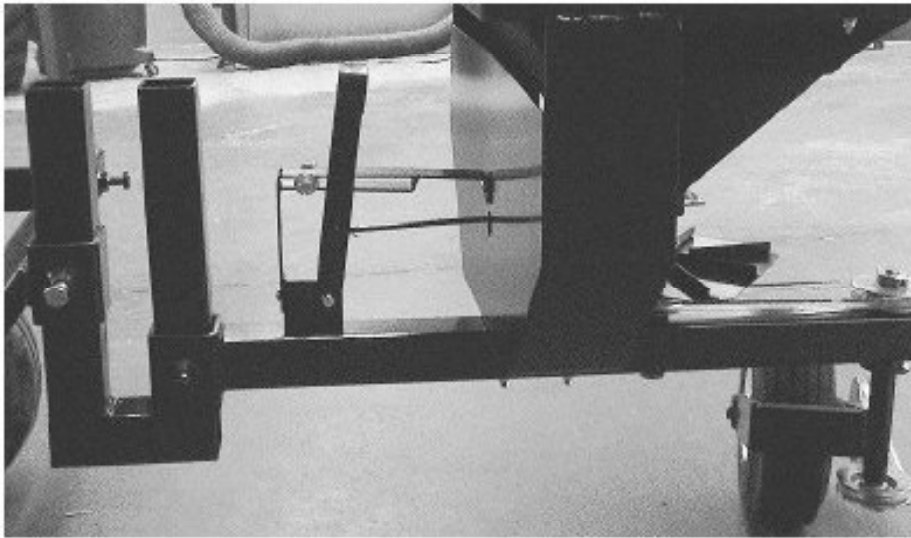

Adjust the unit so that the support frame is level with the ground. Tighten down both bolts on the "U" shaped tube.

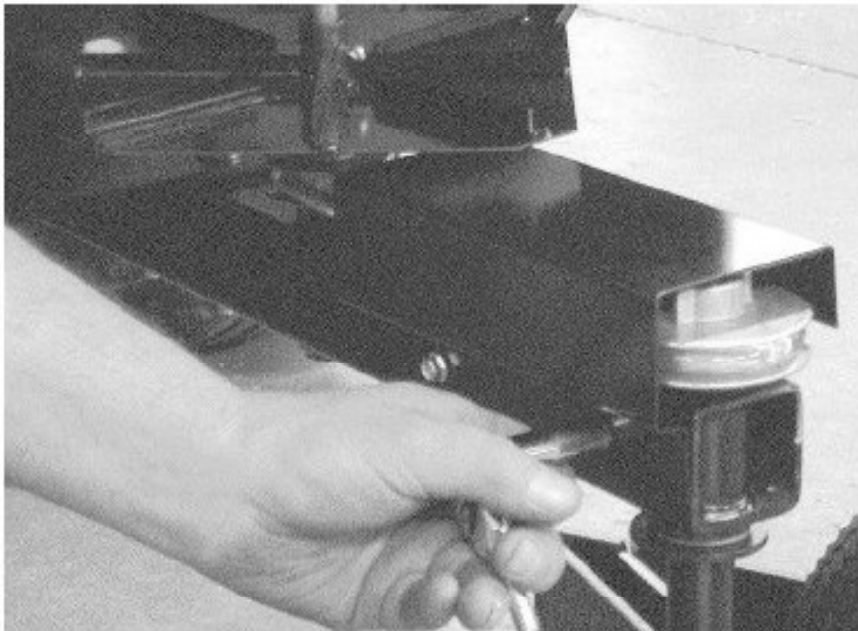

Attach the O-belt guard to the support frame using 2 – 1/4" tek screws. Make sure that the guard is clear of the O-belt.

**RODUCT WARRANTY:**

Country Zero Turn Equipment will, at its option, replace or repair without charge to the original purchases. Any part or parts manufactured by it and found, upon examination, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received for such examination within 90 days from the date of original purchase.

Damages resulting from accident, abuse, or neglect are conditions under which warranty cannot be claimed. Nor will warranty apply to damage resulting from failure to follow the manufacturer's instructions for operation and maintenance nor from the improper selections of a particular application.

All transportation charges on, and damage and loss incurred in connection with the transportation of parts submitted for replacement or repair under this WARRANTY shall be borne by the purchaser.

No other warranties, guarantees or liabilities, either implied or expressed, will be the responsibility of Country Manufacturing, Inc.