


## Zero Turn Core Plugger

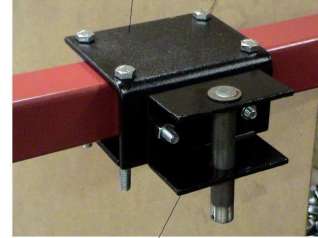

Optional Clamp-on Mount Shown



Drill and bolt C-Mount Bracket

Install end caps with anti-rotation pins against the mount brackets.



Drill 2 holes through caster arm frame on each side and install C-mounting brackets



**CM** Country Manufacturing, Inc.  
P.O. Box 104 333 Salem Avenue  
Fredericktown, Ohio 43019  
Phone: (740) 694-9926  
Fax: (740) 694-5088  
Web Site: [www.countrymanufacturing.com](http://www.countrymanufacturing.com)

Note: The anti-rotation pins must be placed with the pin at the top of the bracket so it pushes the unit down as you move forward.